

MULTI-INNO TECHNOLOGY CO., LTD.

www.multi-inno.com

TOUCH PANEL SPECIFICATION

Model: MI0700CHP-C

This module uses ROHS material

For Customer's Acceptance:

Customer		
Approved		
Comment		

This specification may change without prior notice in
order to improve performance or quality. Please contact
Multi-Inno for updated specification and product status
before design for this product or release of this order.

Revision	1.0
Engineering	
Date	2013-12-11
Our Reference	



REVISION RECORD

REV NO.	REV DATE	CONTENTS	REMARKS
1.0	2013-12-11	Initial Release	





1. REVISION RECORD	1
2. TABLE OF CONTENTS	2
3. APPLICATION······	3
4. GENERAL SPECIFICATIONS	3
5. ABSOLUTE MAXIMUM RATINGS	3
6. ELECTRICAL CHARACTERISTICS	4
7. TIMING SPECIFICATIONS ······	4
8. PIN CONNECTIONS ······	15
9. BLOCK DIAGRAM ······	
10. APPEARANCE SPECIFICATION ······	
11. QUALITY ASSURANCE ·····	20
12. PRECAUTIONS IN USE CTP······	21
13 OUTLINE DRAWING	22

MODULE NO.: MI0700CHP-C

3. APPLICATION

DVD player, UMPC, POS, MID


4. GENERAL SPECIFICATIONS


Composition: 7inch Capacitive Touch Panel (CTP).

Interface: I²C for the CTP.

Item	Specification	Unit
Туре	Transparent type projected capacitive touch panel	
Input mode	Human's finger	
Finger	5	
Resolution	1024 x 600	dots
Outline Dimension	179.7(W) x 107.6(H) x 1.95(D)	mm
Sensor Active Area	154.6(W)(typ.) x92.4(H)(typ.)	mm
Transparency	≧85%	%
Haze	≦5.0%	%
Hardness	7H (typ.)[by JIS K5400]	Pencil hardness
Weight	74	g
Report rate	Max: 122	Points/sec
Response time	15	ms
Point hitting life time	1,000,000 times min.	Note 1

Note 1: Use 8 mm diameter silicon rubber/force 3N to knock on the same point twice per second (no-operating), after test function check pass.



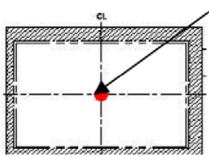

5. ABSOLUTE MAXIMUM RATINGS

Symbol	Description	Min	Тур.	Max	Unit	Notes
VDD1	Supply voltage	-0.3	-	6.5	V	
Vio	DC input voltage	-0.3	-	VDD1+0.3	V	



6. ELECTRICAL CHARACTERISTICS


Symbol	Description	Fingers	F _{scan} (Hz)	Min	Тур.	Max	Unit
VDD1	Supply voltage	-	-	2.5	3.3	3.6	V
GND	Supply voltage	-	-	-	0	-	V
Vih	Input H voltage	-	-	0.8VDD1	ı	VDD1	V
VIL	Input L voltage	-	-	0	•	0.2VDD1	V
	System clock frequency	-	-	-	•	20	MHz
	CPU clock frequency	-	-	-	-	20	MHz
			280	-	-	4	mA
	Active mode	2	160	-	-	5	mA
ı		3	90	-	-	5.2	mA
		4	80	-	-	5.4	mA
		5	75	-	ı	5.6	mA
lalaan	Sleep mode	0	10	-	1	0.11	mA
Ísleep	Deep sleep mode	-	-	-	ı	50	uA
Ifreeze	Freeze mode	-	-	-	-	2	uA
	bootload	-	-		-	6.2	mA
	Calibration	-	-	-	1	6.2	mA

7. TIMING SPECIFICATIONS

7.1 CTP Interface and Data Format [Slave address is 0x5C (7 bit addressing)]

Communication protocol: I²C


Clock frequency: 100 KHz (400 KHz Fast mode)

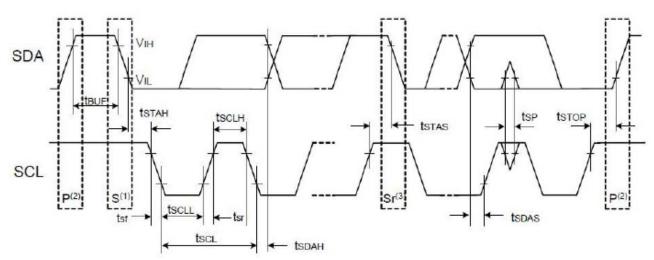

Note: (1) Start Condition;(2)Stop Condition;(3)Retransmit start condition



Symbol	Description	Min	Max	Unit
tscl	SCL input cycle time	12tcyc+600	-	
tsclh	SCL input H width	3tcyc+300	-	
tscll	SCL input L width	5tcyc+500	ı	
tsF	SCL, SDA input fall time	-	300	
tsp	SCL, SDA input spike pulse rejection time	-	1 tcyc	
tsuf	SDA input bus-free time	5tcyc	-	ns
tstah	Start condition input hold time	3tcyc	-	
tstas	Retransmit start condition input setup time	3tcyc	-	
tstop	Stop condition input setup time	3tcyc	-	
tsdas	Data input setup time	1tcyc+40	-	
tsdah	Data Input hold time	10	-	

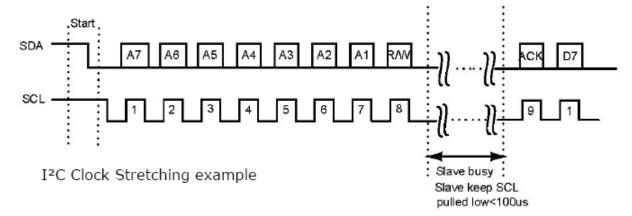

The protocol for data exchange has been designed with the following considerations

- 1 Most of the data traffic is read operation to get the finger or fingers position
- 2 Read operations do need an initial write operation.
- 3 Write operations are most of the time power management and interrupt setting instructions
- 4 Interrupt pulse width setting adjustments need a write operation.

S	START
Р	STOP
Α	Acknowledge
N	No acknowledge
W	WRITE
R	READ
DATA	8-bit

From slave to Master

From Master to Slave



7.2 Timing Characteristic

Read Operation

Read packets have variable content length, decided by the host. It is available to do a single read operation or a sequential read operation. Therefore, the beginning register address is needed to set before a read operation. And the data sent exactly follow the register table 9, table 11, table 12, and table 15. And, the firmware in the slave will use a memory copy of the register for I₂C slave read operation, so that firmware can continue updates, and I₂C slave is still using a consistent (but old) coordinates for read operation as below,




Read operation

In a sequential read operation, the first data sent by the MSI device is therefore the touching register, and then the X and Y coordinates of the first finger, then 2nd finger, 3rd finger, 4th finger and then coordinates of the 5th finger, and so on. Refer in below,




Coordinates read operation

If the host does not finish the read operation when the INT line is set again, the slave firmware will delay to update coordinates registers for I²C read operation until the host finish the read operation referred to below

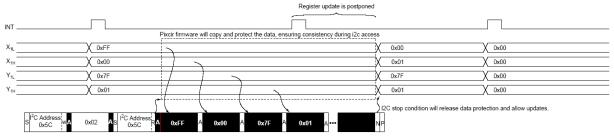

Received data is : X=0x00FF, Y=0x017F (correct)

I²C stop condition will release data protection and allow the slave firmware update the coordinates registers for I²C read operation. So, the host has the change to give incorrect data when it gets the coordinates data with single read operation. Because the host sends many times for I²C stop condition in each multi-fingers coordinate's position reading, it will give the slave firmware chance to update the coordinates registers for I²C read operation, the host will give a combine unrelated data combines new and old coordinates together, referred to below



I2C stop condition will release data protection and allow updates


Received data is : X=0x01FF, Y=0x0000 incorrect because it combines unrelated data

Coordinates read operation explanation



Write Operation

Write packets have variable content length, decided by the host. Write operation stops when host issues an I₂C STOP symbol. The write packet is illustrated in below. Following the I₂C device address, the first byte of the write packet is always the destination register address, referred in table 9, table 11, table 12, and table 15. Subsequent data values are written at the register pointed by the address, immediately upon reception of the byte. The address counter is automatically incremented. Subsequent data bytes are treated in continuation of the writing operation.

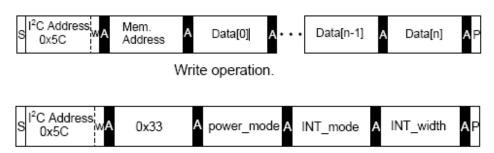

Write mode setting operation .

Note1: MSI Registers

NOTE : INC				
Address	Туре	Name	Description	Category
0	char	touching	Bitfield, see table 10	
1	char	buttons	Buttons bitfield	
2 (lsb)	int	posx1	Finger #1 X position	
3 (msb)				
4 (lsb)	int	posy1	Finger #1 Y position	
5 (msb)				
6	char	id1	Finger #1 identificator	
7 (lsb)	int	posx2	Finger #2 X position]
8 (msb)				
9 (lsb)	int	posy2	Finger #2 Y position	
10 (msb)				touch
11	char	id2	Finger #2 identificator	touch
12 (lsb)	int	posx3	Finger #3 X position	
13 (msb)				
14 (lsb)	int	posy3	Finger #3 Y position	
15 (msb)				
16	char	id3	Finger #3 identificator	
17 (lsb)	int	posx4	Finger #4 X position	
18 (msb)				
19 (lsb)	int	posy4	Finger #4 Y position	
20 (msb)				
21	char	id4	Finger #4 identificator	
22 (lsb)	int	posx5	Finger #5 X position	
23 (msb)				
24 (lsb)	int	posy5	Finger #5 Y position	
25 (msb)				
26	char	id5	Finger #5 identificator	
27	char	strength1	Finger #1 strength	
28	char	strength2	Finger #2 strength]
29	char	strength3	Finger #3 strength]
30	char	strength4	Finger #4 strength	
31	char	strength5	Finger #5 strength	



Bit 0,1,2	Nb of fingers touching (NBF)
Bit 3	Noise flag (indicates the report is unreliable) (NOI)
Bit 4	message flag (indicates a message string is sent by slave) (MSG)
Bit 5	buffer indicates the master has missed more than 2 reports, which are
	stored in buffer array (BUF)
Bit 6	palm flag (indicates the algorithm has a palm or similar blocking issue) (PAL)
Bit 7	water flag, indicates the algorithm has a rejected inputs due to water (WAT)

Address	Туре	Name	Description	Category
32 (lsb) 33 (msb)	int	initial_distance	Distance separating fingers on the first time multitouch is detected	gesture
34 (lsb) 35 (msb)	int	distance	Distance separating fingers	
36 (lsb) 37 (msb)	int	ratio	100-distance / initial_distance	
38	char	water_level		
39	char	noise_level		
40	char	palm_level		monitor
41	char	signal_x		
42	char	signal_y		
43 50	char	button1 button8	Signal level of the buttons	buttons
51	char	power_mode	Power management register. See §2.2.3 and table 16	power
52	char	INT_mode	Control of the ATTb pin, see §2.2.4 and table 17	management
53	char	INT_width	ATTb pulse width	
54-57	char		reserved for future use	
58	char	SPECOP	Special operation . See table 13	special
59 (lsb) 60 (msb)	int	EEPROM_read_ad	Address used during special operation	operations
61	char	Engineering_cmd	Allows, with I ² c, to send "hyperterminal like commands" for engineering modes	
62 (Isb) 63 (msb)	int	CRC	FLASH CRC value (must be requested by SPECOP), excluding "EEPROM" zone	version
64-95	char	version[031]	Customer version control (32bytes) (imap to "eeprom")	



96-135	char	message[039]	Null terminated ASCII message string for engineering and debug purpose	
136 (lsb) 137 (msb)	int	RAW_CTRL	Controls RAW data mode (internal, raw, etc) see table 14	
138	char	cross_x	X coordinate for method 1 crossing node measurement request	method 1
139	char	cross_y	Y coordinate for method 1 crossing node measurement request	Thethod 1
140 (lsb) 142 (msb)	int	cross_node	Measurement result for method 1	
142 (Isb) 143 (msb) 144 (Isb)	int	RAW[069]	Raw data, content controlled by RAW_CTRL register, or alternatively, history buffer (see below)	RAW data
145 (msb) etc.	int	history_buffer		

0	Normal operation
1	"EEPROM" read operation, start address must be written in EEPROM_read_addr
2	"EEPROM" write operation NOT IMPLEMENTED
3	Calibration
4	CRC checksum of the application in Flash

Bit 0	Observation (October to DAW) data October 1963 October 45
Bit 1	Choose function (0: history buffer, 1: RAW data, 2: system info) See table 15
Bit 2	Method (0 0r 1)
Bit 3	Show offset correction (and low-pass fiter for M0)
Bit 4	Show m0 sensitivity adjustment (bit3 must also be set)
Bit 5	M1 pattern small (0) or pattern large (1)
Bit 6	M1 sense direction (0:Y,1:X)
Bit 7	M1 band scan. if 0, only report a single cross node. If 1,report a full X axis
	scan at RAW position
Bit 8	Disable Algorithm
Bit 9	Enable single shot RAW refresh, must be set to 1 and bit9 to 0. Auto back to
	0 and bit9 to 1 after single shot is done
Bit 10	Refresh frozen after single shot is done when 1. Set to 0 to release the
	freeze and go back to normal refreshing
Bit 11	
Bit 12	
Bit 13	
Bit 14	
Bit 15	



Address	Type	Name	Description	Category
142	char	interval	Subsampling rate when filling the history buffer. Disable: 0. Keep all points: 1. Keep one out of two: 2. Etc.	history buffer
143	char	buffer_level	Number of fingers report in the buffer	
144 (Isb) 145 (msb)	int	posx	Coordinate X of the reported point, at time=0	
146 (Isb) 147 (msb)	int	posy	Coordinate Y of the reported point, at time=0	
148 (Isb) 149 (msb)	int	posx	Coordinate X of the reported point at time=1	
150 (lsb) 151 (msb)	int	posy	Coordinate Y of the reported point at time=1	
298 (lsb) 299 (msb)	int	posx	Coordinate X of the reported point, at time=19	
300 (lsb) 301 (msb)	int	posy	Coordinate Y of the reported point, at time=19	

7.3 Operating Mode Register

7.3.1 POWER MODE Register

	L Negistei	
Address	Name	Description of POWER_MODE Register
7-4		Refer to ALLOW_SLEEP function description
		Idle_period_time = k * 16 * Active_scan_period_time [s], with
	IDLE_PERIOD[3-0]	k = value of IDLE_PERIOD[3-0]
		Active_scan_period_time = duration [s] of a scan period in active
		mode.
3	-	Not used
		Allow self demotion from active to sleep mode, provide that this
		flag is set. If the MSI device is in active mode and no fingers is
2	ALLOW_SLEEP	detected for more than IDLE_PERIOD time, then it allow AUTO
		JUMP to sleep mode. If this flag is not set, the host must
		explicitly switch the device from active to sleep mode.
		Power mode setting of the MSI device:
		00:Active Mode
1-0	POWER_MODE[1-0]	01:Sleep Mode
		10:Deep Sleep Mode
		11:Freeze Mode




7.3.2 INT_MODE Register

Address	Name	Description
7-4	-	Not used
3	EN_INT 0:disable interrupt mode 1:enable interrupt mode	
2	INT_POL 0:the interrupt is low active(default) 1:the interrupt is high active	
00:INT assert periodically 1-0 INT_MODE[1-0] 01:INT assert only when finger moving 10:INT assert only when finger touch(default)		01:INT assert only when finger moving

7.3.3 Power management

Active mode


In this mode, the slave resumes with a new scan directly after each I²C transfer (after INT rising edge). This is used to reach the highest refresh rate, but also has the highest current consumption. Below shows how to force the slave into Active mode.



Active mode sequence

Sleep mode

This mode is selected to decrease the current consumption during low activity phases on the sensor, which need a lower refresh rate(10Hz). The MSI can automatically switch to Active mode(when finger is detected, provided that ALLOW_SLEEP bit is set in the POWER_MODE register) or by set POWER_MODE register. Also, the MSI can automatically switch from Active to Sleep mode when no finger is detected for more than IDLE_PERIOD time, provided that ALLOW_SLEEP bit is set in the POWER_MODE register. Figure 44 shows how to force the slave into Sleep mode. Below shows how to force the slave into Sleep mode can automatically switch, provided IDLE_PERIOD=10.




Sleep mode automatically switch sequence

Deep Sleep mode

This mode is selected to achieve the minimum consumption during very low activity phases on the sensor, which need a lowest refresh rate (1Hz). The MSI only can switch to Deep Sleep mode by set POWER_MODE register. Below shows how to force the slave into Deep Sleep mode.






Deep Sleep mode sequence

Freeze mode

In this mode, the slave MCU internal clock source is stopped, and consumption is only MOS leakage. Below shows how to force the slave into Freeze mode. There are two ways to wake up from freeze mode.


- RST pin pull down (connect to the Ground) (default)
- INT pin change ("1 to 0" or "0 to 1")




Freeze mode sequence

7.3.4 Transition of INT line

When INT_MODE=00 in the INT MODE register, the slave will set the INT line with INT_width pulse width after each scan in order to request the attention from the host, as shown in below

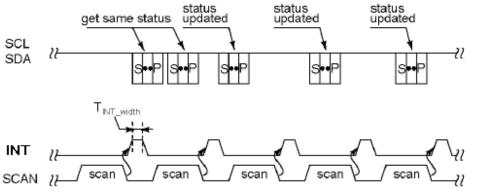


INT line pull up by slave (INT POL=1, INT MODE=00 in the INT mode register)

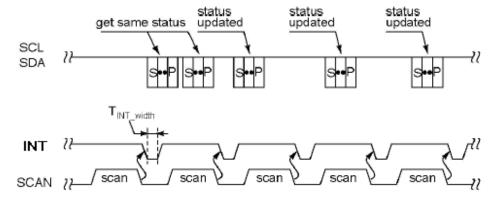

INT line pull down by slave (INT_POL=0, INT_MODE=00 in the INT mode register)




When INT_Mode=01 in the INT mode register and finger moving on the panel, the slave will set The INT line after each scan, as shown in below.

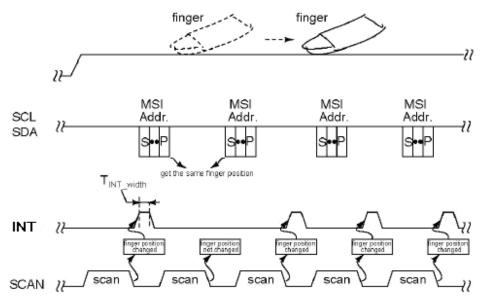

INT line pull up when finger moving (INT_POL=1, INT_MODE=01 in the INT mode register)


When fingers leaves the panel, the slave will continue to pulse INT line for each scan; but once the master has serviced this request and become now aware that there is no more finger touching, the slave will stop pulse the INT line, and will also gradually reduce the scan speed, as shown in below

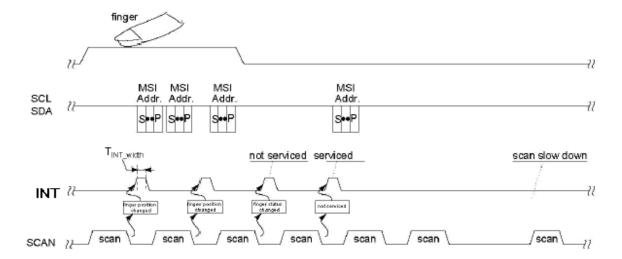

INT line will stop pulse when finger leaves and master has acknowledge the situation (INT_POL=1 in the INT mode register)


When INT_Mode=10 in the INT mode register and finger touch the panel, the slave will set The INT line after each scan as shown in below.



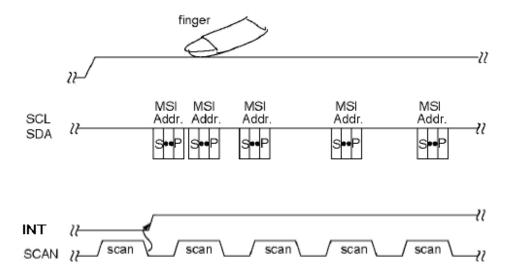

INT line pull up when finger touch (INT_POL=1, INT_MODE=10 in the INT mode register)

When fingers leaves the panel, the slave will continue keep INT line status for each scan; but once the master has serviced this request and become now aware that there is no more finger touching, the slave will release the INT line, and will also gradually reduce the scan speed, as shown in below

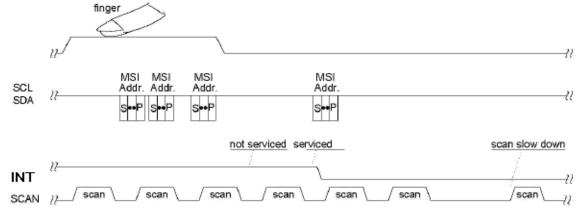


INT line will stop pulse when finger leaves and master has acknowledge the situation (INT_POL=1 in the INT mode register)



8. PIN CONNECTIONS

No.	Name	I/O	Description
1	VDD1	Р	Power; VDD1=3.3V(typ.)
2	GND	Р	Ground
3	RST	1	Reset
4	SCL	1	Clock; 100KHz
5	SDA	I/O	Serial data access
6	INT	0	Active low when data output from touch panel
7	NC	1	No Connect
8	NC	ı	No Connect

9. BLOCK DIAGRAM

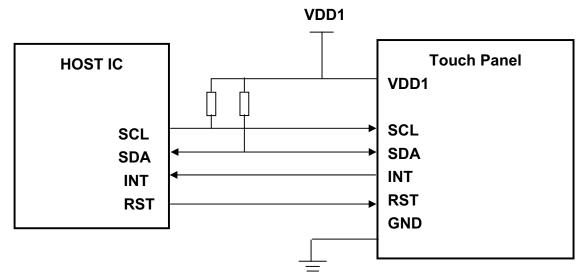

Note: 1. USE APPROPRIATE RESISTOR VALUE DURING HIGH SPEED SCL CLOCK. SUGGESTION: RESISTOR RECOMMENDATION: 1K ohm.

2. To reduce the noise from the power, we suggest you use the independent power for the touch panel (VDD1)



10. Appearance Specification


10.1 Inspection condition


10.1.1 Inspection conditions

10.1.1.1 Inspection Distance : 30 ± 5 cm

10.1.1.2 View Angle:

- (1) Inspection that light pervious to the product: $90\pm15^{\circ}$
- (2) Inspection that light reflects on the product: 90±15°

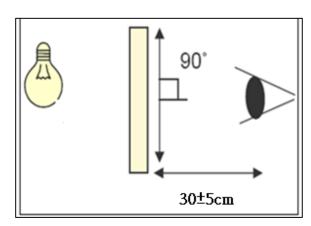

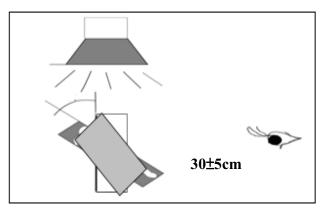

10.1.2 Environment conditions:

Ambient Temperature :	25±5 ℃
Ambient Humidity :	30~75%RH
Ambient Illumination	600~800 lux

10.2 Inspection Parameters

Appearance inspection standard (D: diameter, L: length; W: width, Z: height, T: glass thickness)

Inspection item	Inspection standard	Description	
	SPEC (unit: mm)	Acceptable	
Foreign material	D≦0.5	Ignored	O
in dot shape	0.5 <d≦0.8, distance="">5</d≦0.8,>	n≦3	
	D>0.8	0	D= (L + W) / 2
	SPEC	Acceptable	V . V
	W≦0.05 and L≦7	Ignored	L J
Foreign material	0.05 <w≦0.08, distance="" l≦7,="">5</w≦0.08,>	n≦3	
in line shape	W>0.08 or L>7	0	W
			L : Long W : Width
Contamination	It is acceptable if the dirt can be wip	ped.	



ı		1	1
	SPEC	Acceptable	
	W≦0.05 and L≦7	Ignored	- K "
	0.05 <w≦0.08, distance="" l≦7,="">5</w≦0.08,>	n≦3	\sim
Scratch	0.08 <w≦0.1, distance="" l≦7,="">5</w≦0.1,>	n≦2	L
	W>0.1 or L>7	0	
Inspection item	SPEC		Description
	SPEC (unit: mm)	Acceptable	
	D≦0.2	Ignored	0
	Non visible area	Ignored	
Bubble	0.2 <d≦0.3, distance="">5</d≦0.3,>	n≦3	D= (L + W) / 2
	D>0.3	0	0
Cover & Sensor Crack	Prohibited		1
	SPEC (unit: mm)	Acceptable	т
	Side/Bottom	Ignored	
Cover angle missing	It is prohibited if the defect appears on the front.	0	x z T
Inspection item	SPEC		Description
	SPEC (unit: mm)	Acceptable	-721 25-1
Cover edge	X≦ 2.0, Y≦ 2.0, Z≦T	Ignored	
break	X>2.0, Y>2.0, Z>T	0	T Z



Sensor angle	SPEC (unit: mm)	Acceptable	· · · · ·
missing/edge break	Damage circuit or function.	0	
	It can be seen from the front of cover visible area.	0	
Sensor flange	SPEC (unit: mm)	Acceptable	
	Do not affect assembly.	Ignored	
Ink	SPEC (unit: mm)	Acceptable	
	word unclear, inverted, mistake, break line	0	
Bubble under	SPEC (unit: mm)	Acceptable	
protection film	NA	, 1300ptable	
Function	Prohibited		

10.3 Sampling ConditionUnless otherwise agree in written, the sampling inspection shall be applied to the incoming inspection of

Lot size: Quantity of shipment lot per model. Sampling type: normal inspection, single sampling

Sampling table: MIL-STD-105E

Inspection level: Level II

Class of defects	Definition			
	Major		It is a defect that is likely to result in failure or to reduce materially the usability of the product for the intended function.	
	Minor	AQL 1.5%	It is a defect that will not result in functioning problem with deviation classified.	



MODULE NO.: MI0700CHP-C

11. QUALITY ASSURANCE

11.1 Test Condition

11.1.1 Temperature and Humidity(Ambient Temperature)

Temperature : $25 \pm 5^{\circ}$ C Humidity : $65 \pm 5\%$

11.1.2 Operation

Unless specified otherwise, test will be conducted under function state.

11.1.3 Container

Unless specified otherwise, vibration test will be conducted to the product itself without putting it in a container.

11.1.4 Test Frequency

In case of related to deterioration such as shock test. It will be conducted only once.

11.1.5 Test Method

	Reliability Test Item & Level	Test Level	Remark
No.	Test Item	l est Level	
1.	High Temperature Storage Test	T= 80°C, 120hrs after 1 hrs at room temperature and test.	IEC68-2-2
2.	Low Temperature Storage Test	T= -30°C, 120hrs after 1 hrs at room temperature and test.	IEC68-2-1
3.	High Temperature and High Humidity Storage Test	T= 40° C, 90%RH,120hrs after 24 hrs at room temperature and test.	IEC68-2-3
4.	Thermal Cycling Test (No operation)	-20 $^{\circ}$ C 30min ~ 70 $^{\circ}$ C 30 min , 100 Cycles after 24 hrs at room temperature and test.	IEC68-2-14
5.	Vibration Test (No operation)	Frequency :10 ~ 55 HZ Amplitude :1.5 mm Sweep time : 11 mins Test Period: 6 Cycles for each direction of X, Y, Z	IEC68-2-6
6.	ESD TEST	Air Discharge : ±15KV Indirect Contact Discharge : ±8KV	IEC68-2-27



12. PRECAUTIONS IN USE CTP

1. ASSEMBLY PRECAUTIONS

- (1) Since Touch Panel is consist of glass, please be careful your hands to be injured during handing. You must wear gloves during handing.
- (2) Do not touch, push or rub the exposed touch panel, tweezers or anything harder than HB pencil lead. And please do not rub with dust clothes with chemical treatment.
- (3) Do not stack the touch panels together.Do not put heavy objects on touch panel.
- (4) Please do not take a CTP to pieces and reconstruct it. Resolving and reconstructing modules may cause them not to work well.
- (5) Please excessive force or strain to the panel or tail is prohibited, Do not lift touch panel by cable(FPC).
- (6) Use clean sacks or glove to prevent fingerprints and/or stains left on the panel. Extra attention and carefulness should be taken while handling the glass edge.
- (7) Please pay attention for the matters stated below at mounting design of touch panel enclosure.

 Enclosure support to fix touch panel must be out of active area.(do not design enclosure presses the active area to protect from miss put)

2. OPERATING PRECAUTIONS

- (1) Please be sure to turn off the power supply before connecting and disconnecting signal input cable.
- (2) Please do not change variable resistance settings in CTP. They are adjusted to the most suitable value. If they are changed, it might happen CTP does not satisfy the characteristics specification
- (3) Be careful for condensation at sudden temperature change. Condensation makes damage to snesor or electrical contacted parts.
- (4) CTP has high frequency circuits. Sufficient suppression to the electromagnetic interference shall be done by system manufacturers. Grounding and shielding methods may be important to minimize the interference.
- (5) Touch the panel with your finger or stylus only to assure normal operation. Any sharp edged or hard objects are prohibited.
- (6) Operate the panel in a steady environment. Abrupt variation on temperature and humidity may cause malfunction of the panel.

3. ELECTROSTATIC DISCHARGE CONTROL

(1) The operator should be grounded whenever he/she comes into contact with the CTP. Never touch any of the conductive parts such the copper leads on the FPC and the interface terminals with any parts of the human body.

- (2) The CTP should be kept in antistatic bags or other containers resistant to static for storage.
- (3) Only properly grounded soldering irons should be used.
- (4) If an electric screwdriver is used, it should be well grounded and shielded from commutator sparks.
- (5) The normal static prevention measures should be observed for work clothes and working benches; for the latter conductive (rubber) mat is recommended
- (6) Since dry air is inductive to statics, a relative humidity of 50-60% is recommended.

4. STORAGE PRECAUTIONS

- (1) When you store touch panel for a long time, it is recommended to keep the temperature between 0°C-40°C without the exposure of sunlight and to keep the humidity less than 90%RH.
- (2) Please do not leave touch panel in the environment of high humidity and high temperature such as 60°C 90%RH
- (3) Please do not leave touch panel in the environment of low temperature; below -20°C.

5. OTHERS

For the packaging box, please pay attention to the followings:

- (1) Please do not pile them up more than 5 boxes. (They are not designed so.) And please do not turn over.
- (2) Please handle packaging box with care not to give them sudden shock and vibrations. And also please do not throw them up.
- (3) Packing box and inner case for CTP are made of cardboard. So please pay attention not to get them wet. (Such like keeping them in high humidity or wet place can occur getting them wet.)

6. LIMITED WARRANTY

Unless otherwise agreed between MULTI-INNO and customer, MULTI-INNO will replace or repair any of its CTP which is found to be defective electrically and visually when inspected in accordance with MULTI-INNO acceptance standards, for a period on one year from date of shipment. Confirmation of such date shall be based on freight documents. The warranty liability of MULTI-INNO is limited to repair and/or replacement on the terms set forth above. MULTI-INNO will not responsible for any subsequent or consequential events.



13. OUTLINE DRAWING

